
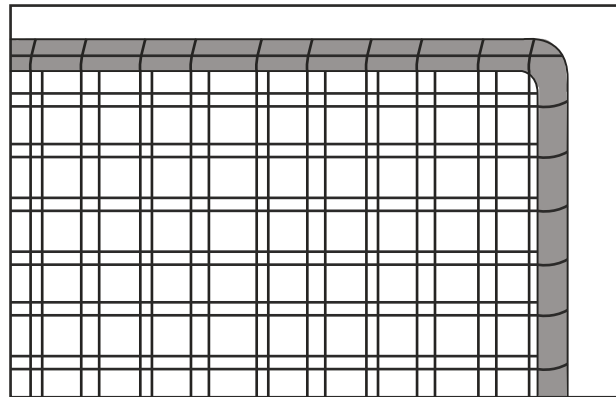
 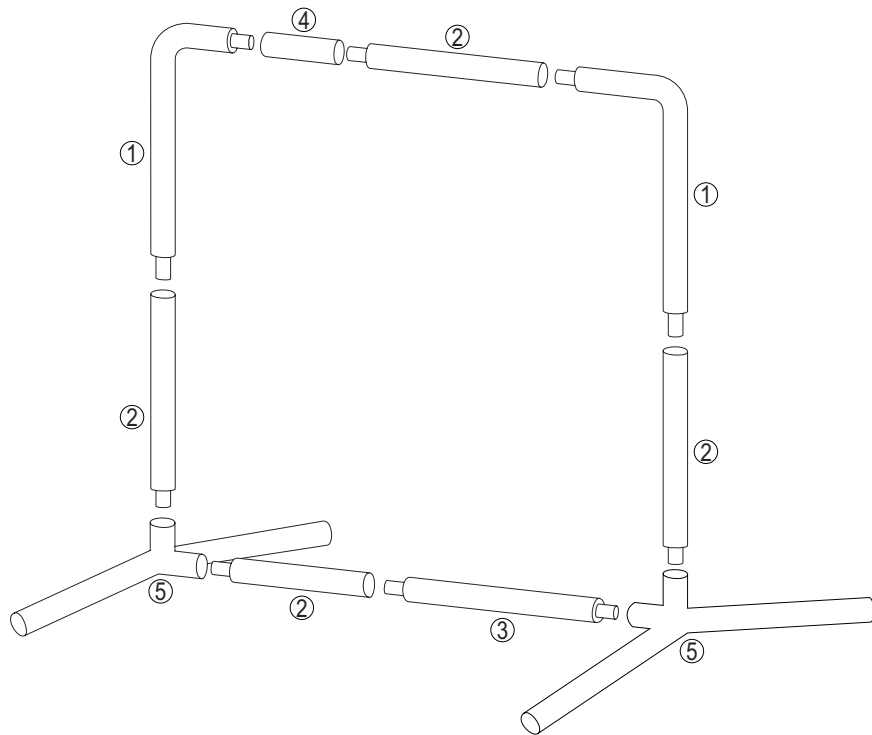



 
 


FORTRESS

Soft Ball Screen



PART	COMPONENT	QTY
①		1
②		4
③		1
④		1
⑤		2
NET		1

ASSEMBLY INSTRUCTIONS

1. Lay out all of the parts to ensure they match what is in the component table.
2. To assemble the base, connect parts 5 with parts 2 and 3.
3. Ensure that the locking buttons are correctly located.
4. For the uprights insert parts 2 into parts 5 and then part 1 into part 2.
5. At the top, connect parts 1 together with parts 2 and 4.
6. Once all the parts are connected, make sure that the locking buttons are all in place.
7. Find the opening of the netting (this will lay along the bottom of the frame) place over the top of the frame and work it down.

NET WORLD SPORTS»

Net World Sports UK
www.networld-sports.co.uk
cs@networld-sports.co.uk
 +44 (0) 1691 683 807

Net World Sports USA
www.networld-sports.com
cs@networld-sports.com
 1-866-861-9095